

## Additional Information



- 1) Make sure your scale is at room temperature, and on a stable horizontal surface free of vibration.
- 2) This scale is not waterproof. Do not expose to moisture.
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking and vibration.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.



see [www.escali.com](http://www.escali.com) for full details  
© Copyright Escali LLC, 2006

## Bathroom Scale

Escali®

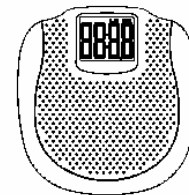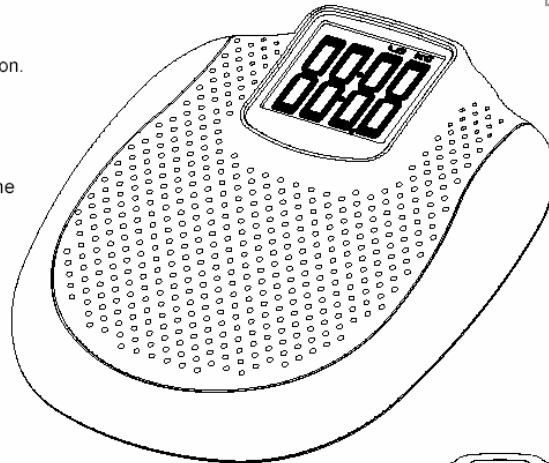


Model: XL180  
Extra-Large Display

User's guide

## OPERATING INSTRUCTION

### FULL DISPLAY

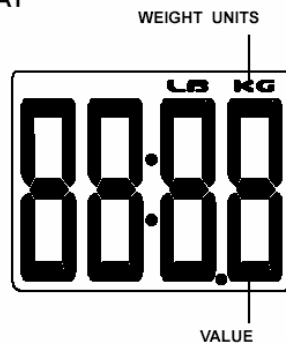

### FEATURES & SPECIFICATION:

- 1) Capacity : 180KG / 400LB
- 2) Weight graduation : 0.1kg / 0.2lb
- 3) Operation temperature : 0~40°C
- 4) Power supply : 2 x CR 2032 battery
- 5) Weight units: LB, KG
- 6) LCD V.A. : 95 mm x 75 mm
- 7) Auto off in 6 seconds if no operation
- 8) Low voltage indication: **LD**
- 9) Error indication: **Err**

### How to weight

- 1) Select weighing unit (lb/kg) with the switch in the back side of the scale.
- 2) Use foot to tap on the middle of the plastic platform.
- 3) LCD shows a moving '8', then '0, 0'.
- 4) Now step on the plastic platform and stand still.
- 5) Your weight reading is shown in about 3 seconds then locked.
- 6) The scale then turns off automatically in about 8 seconds.

### Turning off your scale

The scale turns off automatically in about 8 seconds.

### Changing the Weighing Mode:

You can simply change the weighing mode on the back side of the scale.

### Do not place overweight items on the scale

Weighing items over the maximum weight capacity will cause and overload 'Err' error to display. Immediately remove overweight items to avoid causing damage to your scale.

### Battery Replacement

Replace the batteries when the LCD display shows the low battery 'LO' symbol.